


# Residential Facilities - Dehumidifier Guide

We have installed a small dehumidifier in your room to help combat higher relative humidity levels which naturally occur when the weather warms up outside. It is important that you use this dehumidifier during air-conditioning season in order to help maintain a comfortable humidity level in your room. The unit is designed to run continuously until the set relative humidity (RH%) is reached in the room.


This dehumidifier features a built-in pump which will pump water out through the drain tube from the back – you do not need to touch or empty the water bucket. In order to ensure proper and continuous drainage, the dehumidifier has been tethered to the fan coil unit. Please do not attempt to move the dehumidifier away from the fan coil unit or to disconnect it.

## Some quick tips on how to get the most out of your in-room dehumidifier:

1. Turn it **ON** and set RH to **45%** when the a/c is on in your room.
2. If you turn it off at night, turn it back on before leaving in the morning.
3. Keep the front, sides, and top clear of any furniture or bedding. Keep the unit upright
4. Report any issues with the unit such as a red light on the display or water appearing on the floor around the unit to our 24-Hour Service Center by calling 301-314-WORK (9675).

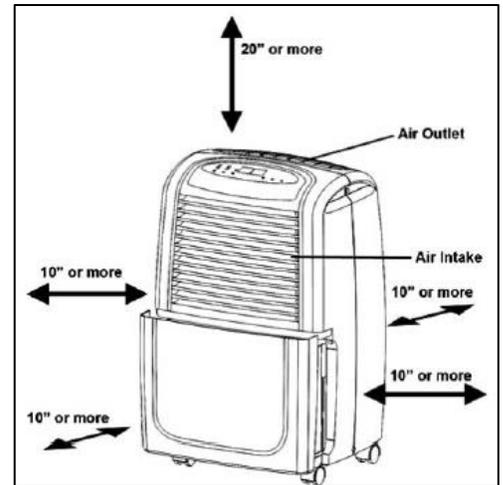

## Below is an explanation of the controls on the front of the dehumidifier:

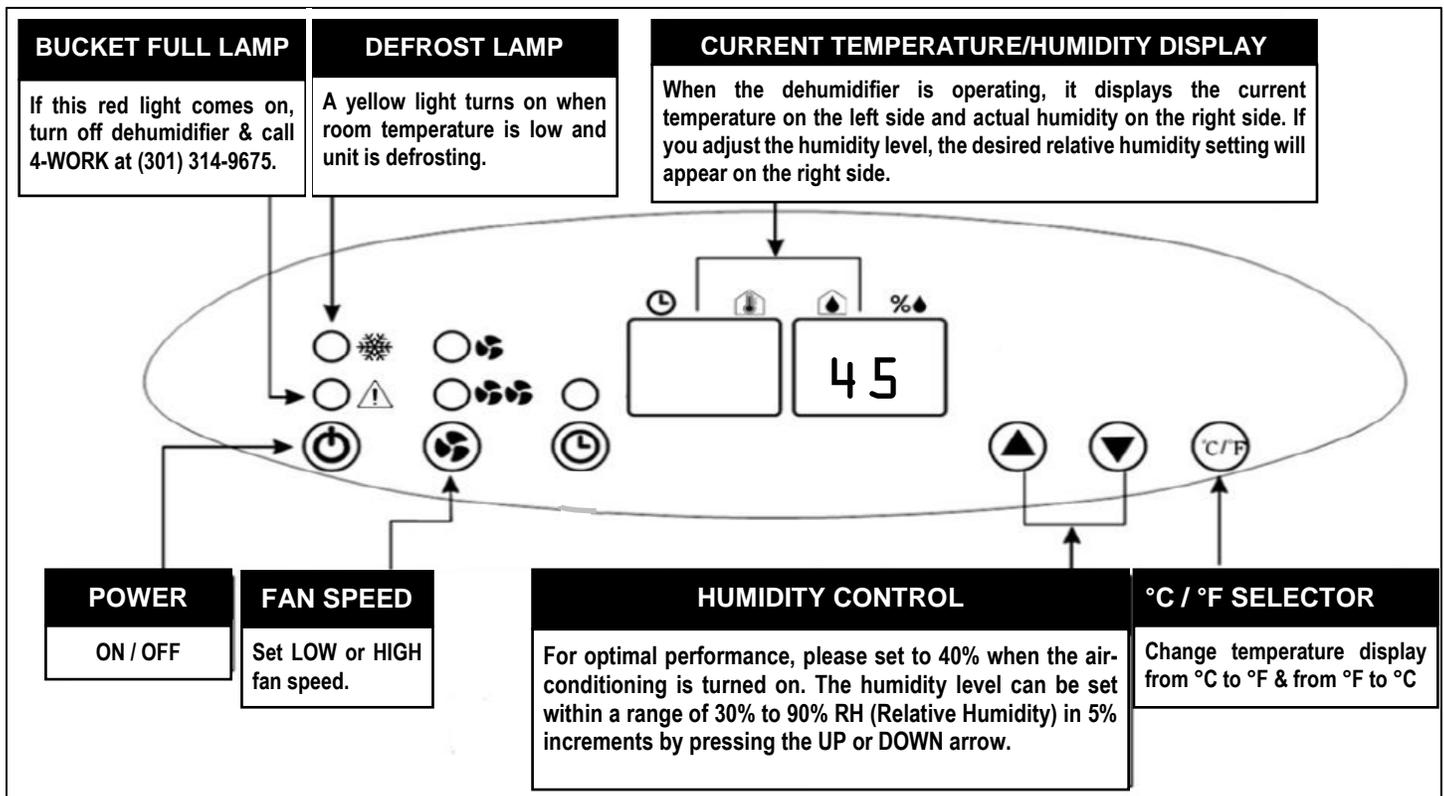

Questions or concerns with your dehumidifier? Email [resfacilities@umd.edu](mailto:resfacilities@umd.edu).

Problems with the operation of your dehumidifier? Call 301-314-9675 (WORK).